




How to use this measuring guide

1. Print this PDF document to actual size
2. Check it is printed to the correct scale by measuring the 250mm line is actually 250mm
3. Cut along the dotted line to create the two Batt Pin measuring tools
4. Using a hole punch create the 4 holes for the Batt pins
5. Place your batt pins through the holes created and try to fit on your wheel
6. The paper should lay flat on your wheel without being stretched or pulled
7. Make a note of the Batt Pin positions and use this to select your batt system
8. To measure your Batt Pin bolt head diameter, place the Batt Pin bolt head between the two lines. The size that has the Batt Pin head just inside / touching the lines indicates your Batt Pin bolt head diameter.
9. Make a note and select this size when choosing your batt system


If you have any questions about your measurements, feel free to take a photo of you using these guides and send them to orders@hartleyandnoble.co.uk and we will be apy to help.

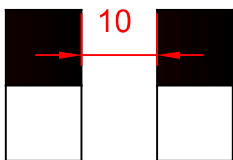

Batt Pin bolt head
Measuring guide

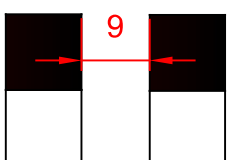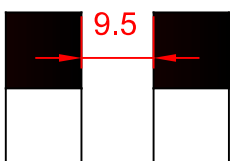

Example

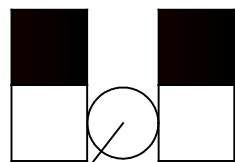

Place bolt head here

Cut Line

Cut Line

250

254

